



CobraUV® Series Deluxe Model Parts Breakdown

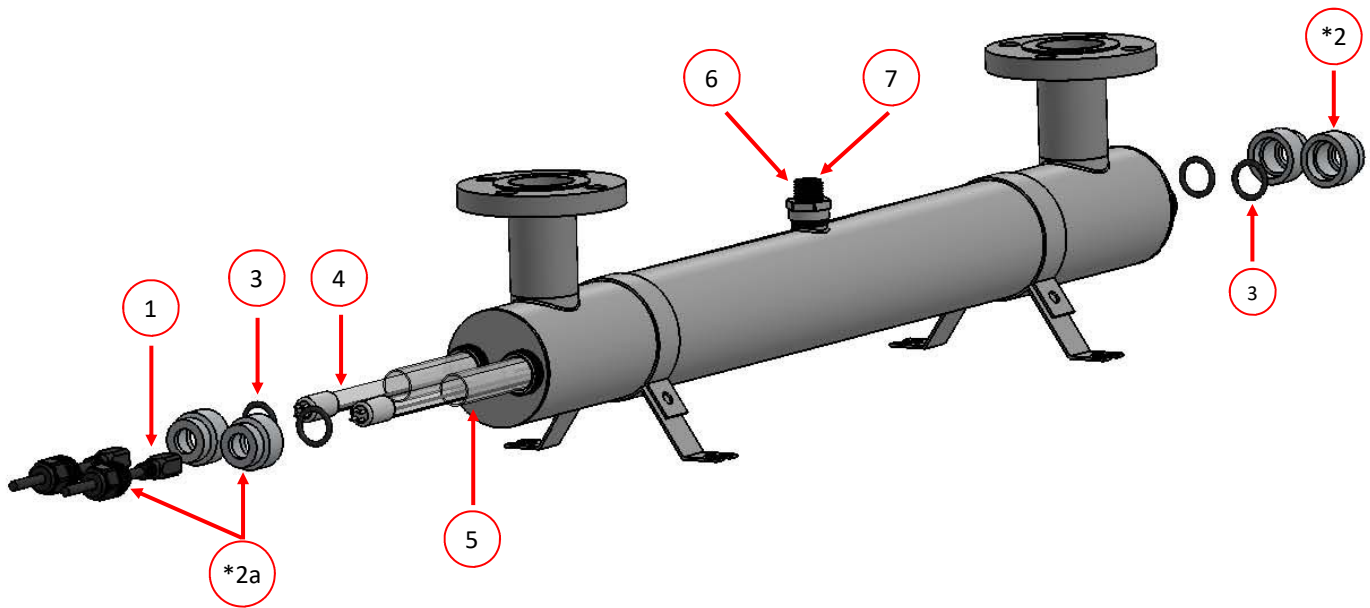

Item No.	Description	Part No.	Quantity required				
			Model No.				
			CB1SS-SD	CB1-SD	CB1SS-HOD	CB1-HOD	CB2-HOD
1	Lamp Harness—8ft Lamp Harness—15ft	LH0001 LH0002	1	1	1	1	2
*2	Compression Nut	CN0007	1	1	1	1	2
	Compression Nut	CN0008	1	1	1	1	1
*2a	Compression Nut	CN0042	2	2	2	2	4
	Compression Nut (lamp harness end)	CN0043	1	1	1	1	2
	Compression Cap for CN0043	CN0044	1	1	1	1	2
	<i>*Compression Nuts vary depending on chamber</i>						
3	Sleeve O-Ring, EPDM	ORNG0009	2	2	2	2	4
4	Standard Output Lamp—254NM Standard Output Lamp—254NM Standard Output Lamp—185NM High Output Lamp—254NM High Output Lamp—254NM High Output Lamp—185NM	GL-5463-4S74R GL-5843-4S74R GV-5843-4S74B GL-5463-4H74Y GL-5843-4H74Y GV-5843-4H74A	1	1 1	1	1 1	2 2
5	Quartz Sleeve, Open Ended	BA-Q7 BA-Q15	1	1	1	1	2
6	UV Viewport Assembly O-Ring for UV Viewport UV Viewport (For Models without UV Monitor) <i>Viewports vary depending on chamber style</i>	VPM0001 002045 BA-VP	1 1 1	1 1 1	1 1 1	1 1 1	1 1 1
7	UV Sensor Probe (Standard Monitoring System) UV Sensor Probe (WatchDog Monitoring System) O-Ring for UV Sensor Probe SENSOR PROBE ADAPTER PARTS Sensor Probe Adapter Sensor Probe Adapter Cap O-Ring for UV Sensor Probe Adapter	SNSR0007 SNSR0004 ORNG0101 FTNG0021 FTNG0023-UV 11992	1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1 1
Not Shown	Thermistor (For Models with Standard High Heat)	THERM0100	1				

CobraUV® Series Deluxe Model Parts Breakdown

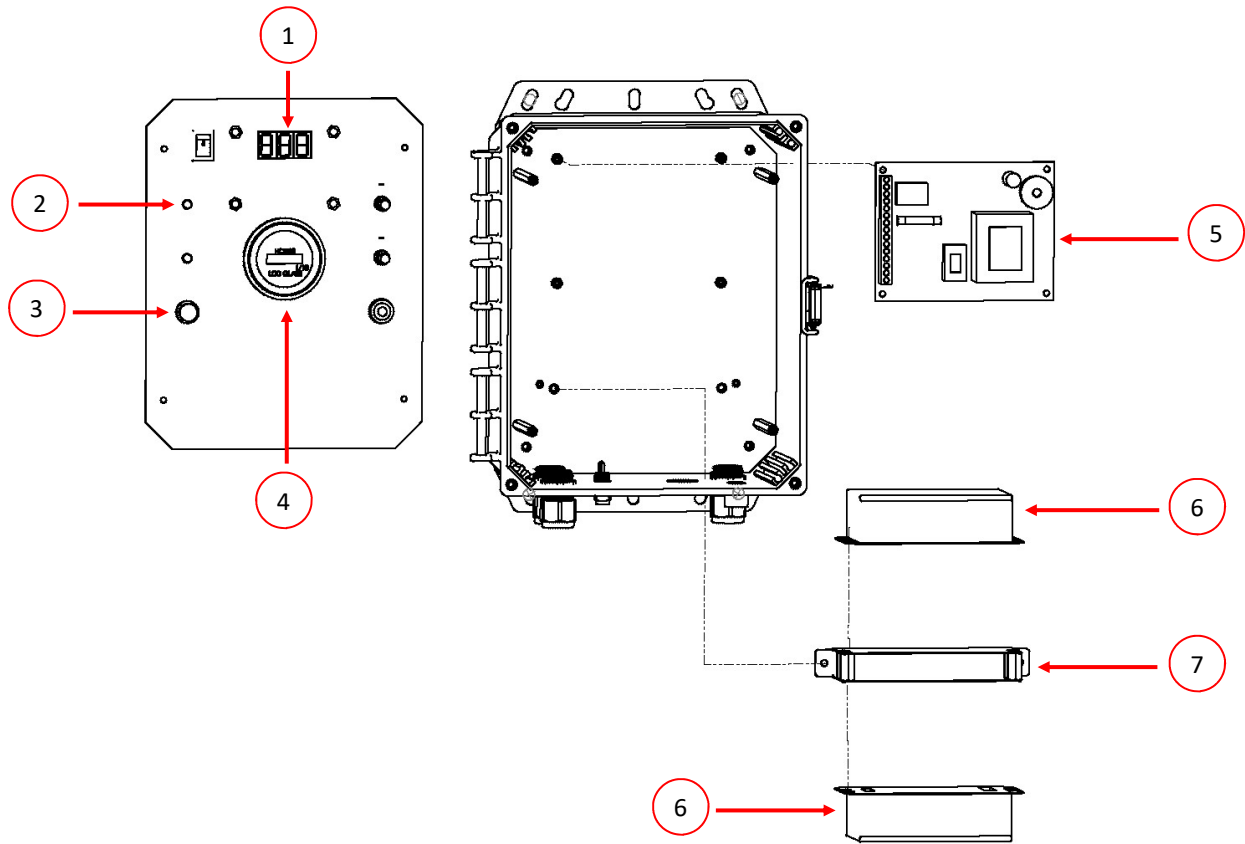

Item No.	Description	Part No.	Quantity required				
			Model No.				
			CB1SS-SD	CB1-SD	CB1SS-HOD	CB1-HOD	CB2-HOD
1	UV Intensity Display Board (For Models with Standard UV Meter Board)	ELEN0028	Model Dependent				
2	Lamp Status Indicator	LED0100-18	1	1	1	1	2
3	Low UV Indicator—120V	LGHT0003	1	1	1	1	1
	Low UV Indicator—220V (For Models with Standard UV Meter Board)	LGHT0004	1	1	1	1	1
4	Elapsed Runtime Meter	ERTM0100	1				
5	UV Meter Board		Model Dependent				
6	Ballast 100-277V 50/60Hz	BLST0033	1	1			
	Ballast 100-277V 50/60Hz	BLST0034			1	1	1
	Ballast 110-240V 50/60Hz with lamp out alert	BLST0055	1	1			
	Ballast 110-240V 50/60Hz with lamp out alert	BLST0056			1	1	2
7	Ballast Mounting Bracket	BRKT0002	1				