

BA Series

Ultraviolet Water Disinfection System *Installation, Operation and Maintenance Manual*



Standard, Plus and UV Monitor Models

KEEP THIS MANUAL ON HAND

IMPORTANT: Anyone responsible for the installation, maintenance or operation of this equipment must have a thorough understanding of the instructions and safety requirements before attempting to install this system.



One Source for All Your UV Needs!

Dear Customer:

Thank you for selecting UV Superstore, Inc. to provide the equipment for your ultraviolet water treatment needs. The BA Series is specifically intended for residential use and is designed to treat the whole house. Your BA Series system reflects our broad experience in UV water treatment and our commitment to quality craftsmanship. At the heart of the BA Series system is our premium quality UV lamps that are manufactured in the USA. These systems are built with the customer in mind and incorporate reliable parts from around the world. When properly installed and maintained, your UV Superstore, Inc. equipment will provide years of reliable service.

Please review the Installation, Operation and Maintenance (IOM) Manual carefully and keep it on hand for readily available assistance. UV Superstore, Inc. designs its models for service maintenance ease. The IOM manual provides essential information to safely install and service your system.

UV Superstore, Inc. manufactures ultraviolet equipment with the highest quality components available. Your equipment has met thorough testing procedures ensuring the efficiency of your system. As with any equipment regular maintenance procedures are required. You will have to replace your UV lamps and other items from time to time. UV Superstore, Inc. offers a complete line of replacement parts, not only for your products, but for most lines of ultraviolet water treatment equipment. Please call us for details.

UV Superstore, Inc. has built an industry-leading reputation by providing a reliable and knowledgeable technical support team. We stand by ready to assist you in all of your UV water treatment needs. Please contact us with any questions you may have regarding your system.

Best regards,

The UV Superstore, Inc. Team




Table of Contents

What's In The Box (Package Contents)	1
Safety Instructions	2
1) Information	3
2) About Ultraviolet (UV) Disinfection	3
3) UV Disinfection Chamber	4
<i>General Guidelines</i>	4
4) Safety Precautions	5
5) Preparation For Installing UV System	6
a) <i>System Inspection</i>	6
b) <i>Water Quality</i>	6
c) <i>Water Supply Pressure Check</i>	7
d) <i>Location Selection</i>	7
6) Installation Instructions	8
a) <i>General Guidelines</i>	8
b) <i>Installation Orientation for UV Disinfection Chamber</i>	8
c) <i>Chamber Mounting</i>	8
d) <i>Power Supply</i>	8
e) <i>Quartz Sleeve Installation</i>	10
f) <i>Lamp Installation</i>	12
g) <i>Plumbing System Sanitization Procedure</i>	12
h) <i>Countdown Timer and Timer Holder</i>	13
7) Operation & Monitoring	14
a) <i>Ultraviolet System</i>	14
b) <i>Power Supply</i>	14
8) UV Monitor (Option)	19
a) <i>General Operation</i>	19
b) <i>Installation</i>	20
c) <i>Calibration</i>	22
d) <i>Wiring Instructions for 230V</i>	23
9) Maintenance	24
a) <i>Lamp Maintenance</i>	24
b) <i>Quartz Sleeve Maintenance</i>	25
c) <i>Lamp Recycling</i>	25
d) <i>Countdown Timer</i>	25
Replacement Parts List	26
Technical Specifications	28
Troubleshooting	29
Maintenance Log	30
Warranty Information	31
Mechanical Drawing	32

What's in the Box

Before installing your UV system, take a moment to make sure all parts are included in the box

1

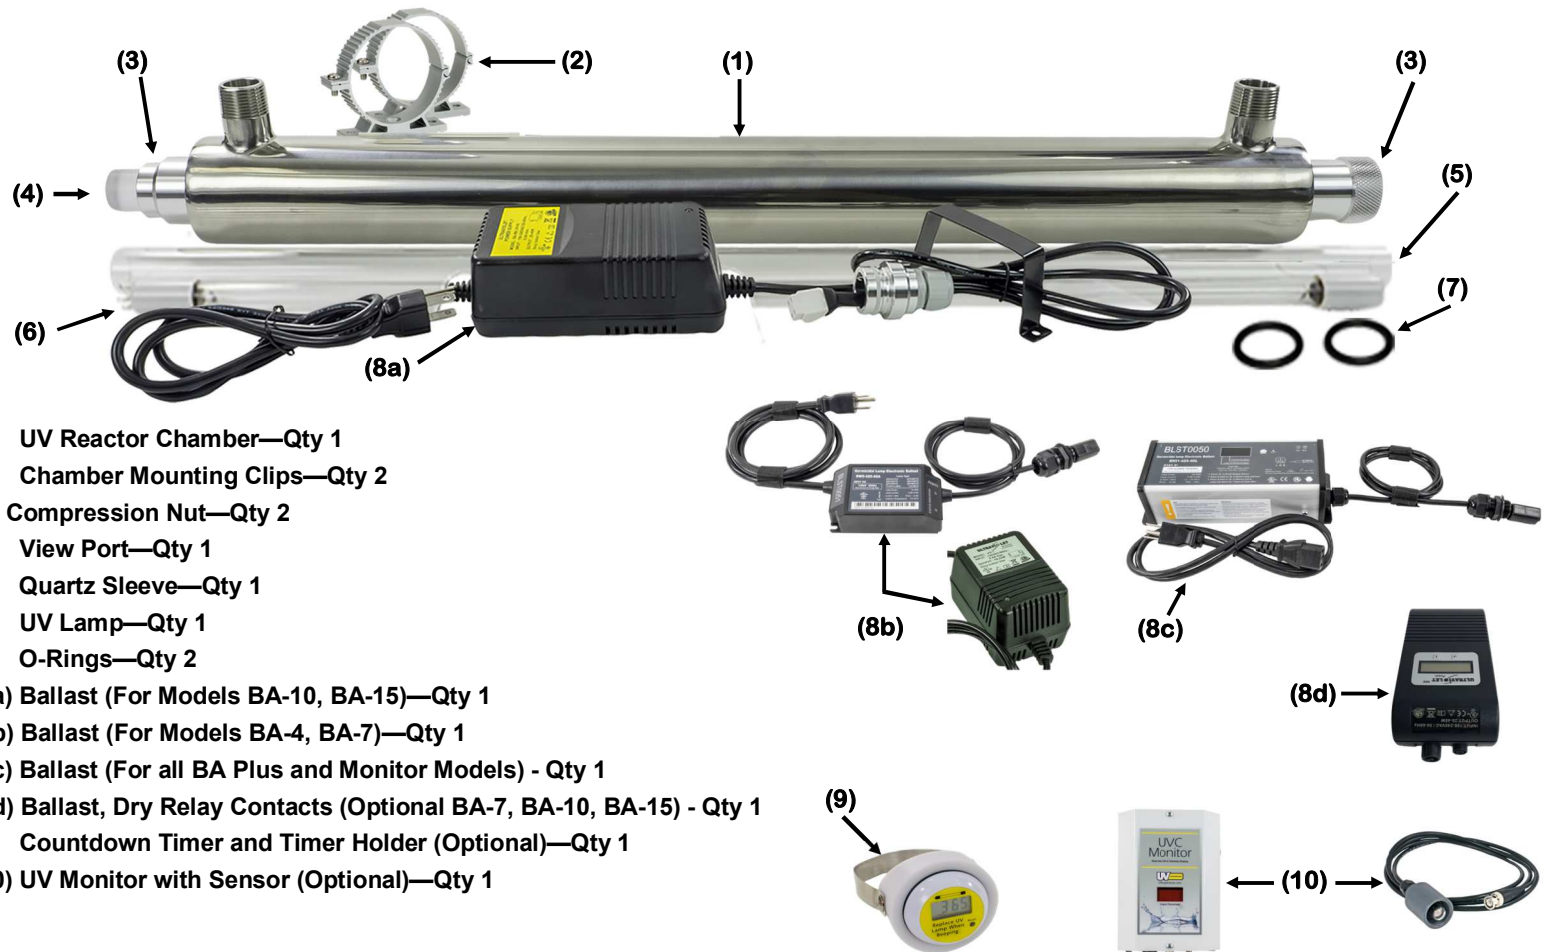

SAFETY INSTRUCTIONS

In order to protect end users and operators from injury, safety precautions must be followed. This Installation, Operation and Maintenance (IOM) manual outlines important safety issues. The following **WARNING SYMBOLS** will be found throughout the manual to alert the end users to take important precautions:




EYE PROTECTION

This symbol indicates that eye protection must be worn to protect from UV light as well as debris.



HAND PROTECTION

This symbol signifies that hand protection must be worn to protect the lamps from skin oils as well as protect the operator from UV light and sharp materials caused by a broken lamp or quartz.

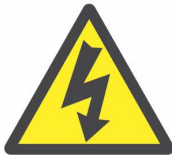

ELECTRIC SHOCK WARNING

This symbol signifies electrical shock possibility. Failure to observe this warning may lead to serious injury or death.



CAUTION

This symbol indicates a potentially dangerous situation. Failure to adhere to this warning may lead to serious injury and/or death.



INFORMATION

This symbol signifies helpful information.

1) Information



Please read this manual prior to installing, starting up and operating the equipment. The equipment uses the latest in UV technology, and has been designed to make operation and maintenance easy.

The quality of the liquid entering the UV system needs to be monitored. Based on your water quality, the UV system will need to be cleaned on a periodic basis. Maintenance of the UV system will require replacement parts. It is suggested that key spare and replacement parts be kept on hand. For best operation, it is recommended to use the correct replacement parts. Incorrect replacement parts could result in damage to the system and void the warranty.

2) About Ultraviolet (UV) Disinfection

The technology uses UV light to target and disable disease-causing microorganisms and pathogens.

Over 100 years ago, scientists discovered that if you exposed pathogens to UV light, their reproduction was limited. The UV light source they used resided in the UVC range of the light spectrum. Specifically, they discovered that light in the 254 (NM) nanometer range was the most effective wavelength for this process.

When many pathogens are exposed to UV light, their cells become damaged and this damage inhibits reproduction. The UV light, produced by a special UV lamp, damages the cell's DNA and RNA and once damaged, they are unable to replicate. This physical process renders them harmless. The amount of damage is a result of the intensity of the UVC output multiplied by the time the pathogens are exposed to the light. The applied dosage is commonly referred to as microwatts or millijoules and is often expressed as $\mu\text{Ws}/\text{cm}^2$ or mJ/cm^2 . Most residential applications require a UV dosage ranging from 16,000 up to 40,000 $\mu\text{Ws}/\text{cm}^2$ depending on water quality.

Why are more consumers selecting UV technology?

- a) UV is considered a green technology
- b) No chemicals are added, so there is no need for chemical removal
- c) No chemical storage
- d) UV works instantly without requiring a residence time
- e) Easy maintenance

3) UV Disinfection Chamber

General Information



The disinfection treatment chamber is manufactured from 304 stainless steel. Each chamber comes with two aluminum mounting clips. Chamber mounting screws are not included.

For Standard and Plus models, the chamber has an MPT (male pipe thread) inlet and outlet connection. For models equipped with a UV Monitor, the chamber has an MPT inlet and outlet connection and a sensor port.



Chamber for Standard and Plus Models

BA-4, BA-7, BA-10, BA-15

BA-4P, BA-7P, BA-10P, BA-15P







Chamber for UV Monitor Models

BA-10M, BA-15M

4) Important Safety Precautions

Read and follow all safety precautions to guard against injury. Basic safety precautions must be observed. Keep on hand for future reference.

UV lamps and their quartz sleeves can become razor sharp if broken. Take care when installing and removing lamps and quartz sleeves. Hand-tighten compression fittings only! Do not use wrenches or other tools.

	<ul style="list-style-type: none"> • Ultraviolet light (UVC) is harmful to eyes and skin. Use UV lamps only inside the disinfection chamber with the appropriate protective covering. Avoid exposure to UVC radiation. • BA Series UV System should only be used for its' intended purposes as described in the IOM Manual. The use of attachments not recommended or sold by manufacturer may cause an unsafe condition. • BA Series UV System must be properly installed in accordance with the IOM Manual and in compliance with all applicable local and state regulations before use. Read and observe all important notices on the disinfection system. • BA Series UV System is intended for indoor use only.
	<ul style="list-style-type: none"> • To avoid possible electric shock, take special care when using water with this equipment. Always shut off and disconnect power to the unit before: <ol style="list-style-type: none"> 1. Making repairs—We strongly recommend that a qualified individual who fully understands the IOM Manual perform service and/or repairs to your system. 2. Cleaning 3. Replacing a UV Lamp • Do not operate disinfection system if it has a damaged cord or plug, if it is malfunctioning, or if it is dropped or damaged in any way. • The power cord of disinfection system is equipped with a 3-prong grounding plug that mates with a standard 3-prong grounded wall outlet to minimize the possibility of electric shock. Be sure the outlet for the disinfection system is wired and grounded properly. DO NOT under any circumstances cut or remove the third prong from the power cord. • Always unplug the disinfection system from outlet when not in use. Never unplug by pulling on the power cord. Always grip plug firmly and pull straight out of the outlet. • Shut down system before servicing: <ol style="list-style-type: none"> 1. Turn off water supply to the BA Series UV disinfection system 2. Disconnect all power to the BA Series UV disinfection system 3. Drain water from the system.
	<ul style="list-style-type: none"> • Eye protection must be worn! UV light is extremely harmful to eyes and skin and will cause burns. Do not look directly or indirectly at the UV light. • Never operate the UV lamp outside of the UV system. • Do not expose your skin for any prolonged time. Use protective clothing and eyewear (make sure it is UV resistant) when servicing equipment. • If accidentally exposed to UV light for an extended period, immediately seek medical attention. Symptoms for eye exposure include burning, itching and redness. Symptoms for skin exposure are similar to sun burn.
	<ul style="list-style-type: none"> • Use cotton gloves when handling lamps and quartz sleeves. Skin oils will adhere to the lamps and sleeves and prevent UV light from properly emanating. • If the sleeves become dirty, wipe them with a lint free cloth with denatured alcohol.

5) Preparation for Installing UV System



Before you begin, perform the following pre-installation steps:

a) System Inspection

Ensure that your BA Series system is correctly sized for your desired dosage and flow capacity.

(Refer to Table 2 in Technical Specifications for more information on dosage)

b) Water Quality

For optimum performance of your UV system, water quality is extremely important. Following proper pretreatment procedures is essential for the UV disinfection system to operate as intended.

UV disinfection dosages are dependent upon the quality and clarity of incoming water. Impurities in water can interfere with UV intensity and cause dosage to fall to unsafe levels. Have your water tested to determine it meets the standards in the below table. If any of the elements exceed the maximum levels shown in the table, contact your water professional for recommendations for proper pretreatment methods. All BA Series models are rated for a UV Transmission (UVT) rate of 95% or greater. If your UVT is less than 95%, contact your water professional.

The following table shows levels that are recommended for installation:

Table 1

Element	Recommended Maximum Levels (1mg/L=1ppm)	Actual Value
Turbidity	<5 NTU	
Suspended Solids	<5 mg/l	
Color	None	
Iron	0.3 mg/l	
Manganese	0.05 mg/l	
pH	6.5 to 9.5	
Hardness	<120 ppm	

c) Water Supply Pressure Check

Check the pressure of the water supply. The BA Series UV System is designed for a maximum water pressure of 100 PSI. If your water pressure exceeds 100 PSI, install a pressure reduction valve before installing the UV system.

d) Location Selection

Select a location that meets the following guidelines:

- The unit must be installed between the cold water source and the water heater as inlet temperature must not exceed 100°F.

For proper installation, refer to the Installation Orientation Diagram, Figure 1 and Figure 2

- The disinfection unit can be installed either horizontally or vertically.

For correct water flow direction, refer to Installation Orientation Diagram, Figure 1 and Figure 2

- The unit must be within 5' of an electrical outlet. A 6' cord is included with the system.
- The power supply contains sensitive electronic components. It is recommended that the unit be plugged into a surge suppressor to help protect electronic components.
- The unit must be protected from freezing. Freezing damage will void the warranty.
- The unit should be placed where a potential leak will not cause water damage. UV Superstore, Inc. is not responsible for water damage.
- Vibration of ultraviolet equipment will damage lamps and lead to premature system failure. Choose a location for your BA Series system that is isolated from vibration. Potential vibration sources include heavy equipment, poorly connected pipes and erratic or improper pumps. A water hammer may cause O-Ring failure. If your system is subject to water hammer conditions, we recommend that you install a water surge suppressor.
- There must be enough clearance to remove the UV lamp and the quartz sleeve for replacement and regular maintenance.
- Recommended clearance is length of unit plus four inches.

For additional clearance requirements, refer to the Installation Instructions section and Figure 5 in Technical Specifications


6) Installation Instructions

a) *General Guidelines*



It is recommended that all installation and maintenance procedures should be done in accordance with state and local electrical and building codes.

UV System can be mounted either vertically or horizontally.

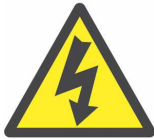

WATCH FOR CLEARANCE—

Be sure to allow a minimum clearance of the length of the unit plus 4" from the unit to any obstruction on one end in order to be able to replace the lamp and quartz sleeve.

ELECTRICAL SHOCK—

Check for hidden electrical wiring before drilling holes.

b) *Installation Orientation for UV Disinfection Chamber*

For vertical installation, water flow must be from the bottom to the top of the unit. For horizontal installation, inlet and outlet must be pointing upward.

(Refer to the Installation Orientation Diagram, Figure 1 & 2)

c) *Chamber Mounting**

Once the location for the unit has been determined and orientation of unit has been selected, the chamber can now be mounted. Use the two metal clips provided with unit to mount and secure the treatment chamber.

d) *Power Supply Mounting**

The power supply should be mounted to the wall and near the disinfection treatment chamber. It is recommended to place the power supply above the chamber and away from any water connection point(s). This will block water from potentially leaking onto the power supply by means of a leak at a connection point or a “sweating” system. To prevent any water from potentially entering the power supply, make sure you allow for a “drip-loop” on the lamp and power cord.

**Power Supply and Chamber mounting screws are not included.*

Installation Orientation Diagram

Figure 1
Typical Horizontal Installation


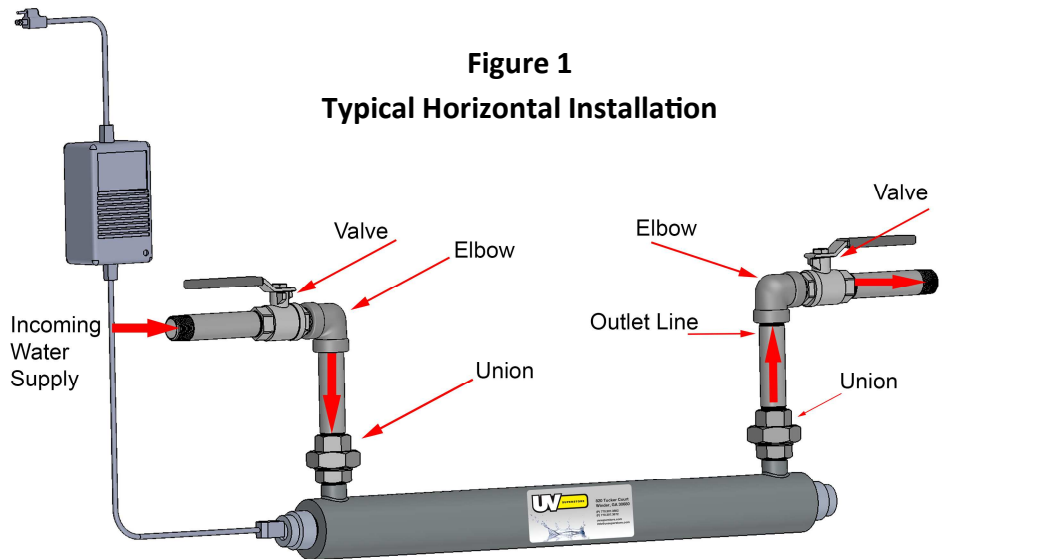


Figure 2
Typical Vertical Installation



e) Quartz Sleeve Installation

The quartz sleeve surrounds the lamp and prevents water from contacting the lamp and electrical parts. The sleeve is made of pure fused quartz which allows 99% of the ultraviolet light to pass through.

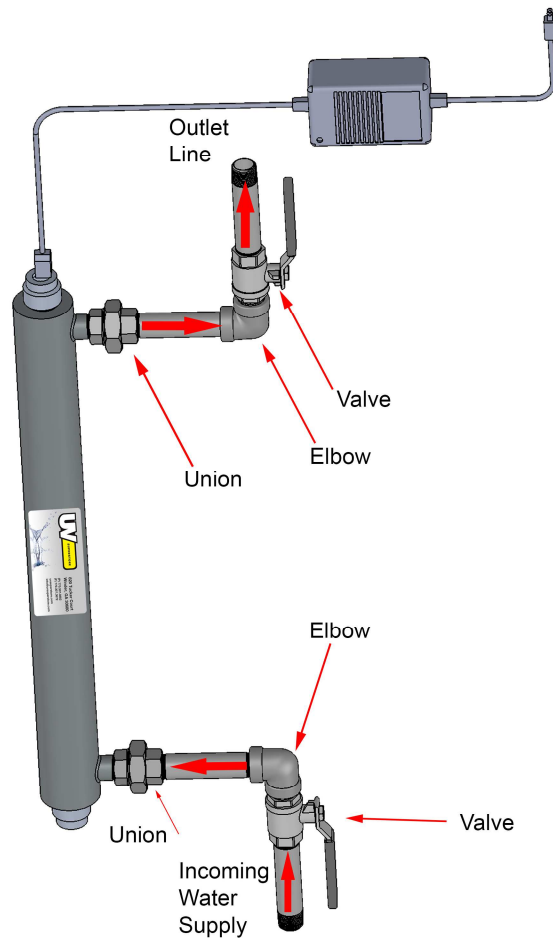

The quartz must be kept clean and free of organic buildup to ensure optimum ultraviolet transmission. The quartz sleeves need periodic cleaning with the frequency of such cleanings determined by the quality of the water passing through the system. Use cloth gloves when handling quartz sleeves or UV lamps to avoid putting fingerprints on them.



Take great care when removing the quartz sleeve from the packing carton.

After the ultraviolet unit has been secured and the inlet/outlet piping connections have been made, complete the following steps for the quartz sleeve installation process.

First, remove the compression nuts from each end of the disinfection unit.

Slowly and carefully slide the quartz sleeve through the chamber head until it protrudes equally beyond the nipple on each end of the chamber making sure it is centered inside the chamber. Place the O-Ring over the end of the quartz and push the O-Ring back until it stops at the nipple.



Be very careful when installing the compression nuts over the quartz sleeve. Tighten each compression nut simultaneously by hand, making sure that the sleeve protrudes from each nipple equally.

ONLY TIGHTEN BY HAND – NEVER USE PLIERS. Make sure as you tighten the compression nuts that you maintain a clearance between the stop ridge machined in the compression nut and the edge of the quartz sleeve.

After you have tightened the compression nuts, verified placement of the O-rings, and all other plumbing connections, open the outlet valve. Slowly open the inlet valve and flush out all remaining air. Then, close the outlet valve and open the inlet valve fully. Check the unit for leaks.

If you find a leak at the compression nut, first, slowly and carefully hand tighten the nut further. If the leak continues, drain the unit. Then, remove the compression nuts from both ends to allow visibility to the quartz sleeve and sealing O-Ring. Inspect both the sealing O-Ring and quartz sleeve for correct placement and possible damage. It is important to ensure the quartz sleeve is centered inside the unit. Make sure the sealing O-Ring has been placed correctly onto the quartz and chamber nipple. The sealing O-ring should look similar on both ends. If both ends are not similar, reinstall the sleeve until they are alike.

Once completed, carefully reinstall the compression nuts and tighten by hand. Re-pressurize the unit and check again for leaks.



DO NOT install the lamp or ballast until all leaks have been corrected.



Compression Nut

f) UV Lamp Installation



The UV lamp is very fragile. Do not handle it with bare hands. Use **clean cotton gloves or cloth** when handling lamp to keep it free of dust or fingerprints. If dust or fingerprints get on the lamp, wipe it with a clean cloth and denatured alcohol.



Take care when removing the ultraviolet lamp from the packing carton. Slowly and carefully slide the lamp into the quartz sleeve. Attach the ultraviolet lamp to the lamp socket. Ensure the lamp socket is pushed all the way down to the base of the lamp for proper contact. Then screw the strain relief into the compression nut.

g) Power Supply—

Do not plug the ballast power cord into the outlet until the UV lamp has been connected to the lamp socket. Once the lamp has been securely installed and connected, plug in the power cord. The ballast will turn on, the LED will display the number of remaining lamp life days (365 for a new system or new lamp), and the lamp will power up. Allow at least 1-3 minutes for the lamp to come to full power.

h) Countdown Timer and Timer Holder (Model Dependent Option for Standard Systems)

Standard BA models have an option for a countdown timer and timer holder. The CDT-365 countdown timer is used to remind you when you need to replace your UV lamp. The timer is equipped with an audible alarm that sounds after 365 days has lapsed. The timer also has the ability to count up once the time has expired.

Attach the timer onto the holder by pushing it down or by snapping it in place. The timer holder needs to be attached to the chamber. To attach the holder, unscrew one side of the metal mounting strap and place on the chamber and then tighten the screw to hold it in place. Set the timer by pressing the reset button using the tip of a paper clip or something similar.



i) **Plumbing System Sanitization Procedure**



NOTE: Always follow the sanitizing procedures required by applicable state or local laws.

It is recommended before the initial use of your UV disinfection system and after routine maintenance procedures, to sanitize your water system to ensure that no organisms are present. Water in the well and storage tank can be treated with a strong chlorine solution to destroy disease organisms. All pipelines and fixtures in the distribution system should be rinsed and flushed with chlorinated water.

Ordinary household liquid laundry bleach (about 5.25% available chlorine) can be used to sanitize the plumbing system. The quantity required depends on the volume of water to be treated. The United States Environment Protection Agency (EPA) indicated that about 100 parts of chlorine, by weight, mixed in a million parts of water will destroy essentially all water-borne disease organisms.

The amount of chlorine depends upon the diameter and depth of your well. As a general rule of thumb, use ½ gallon to treat an 8" diameter/80' deep well and one gallon for anything larger. Pour household bleach into your water system. If you have a filter container, fill it with bleach. If you have no filter then introduce chlorine directly into your well. You may contact your State Extension Service or a water treatment specialist for additional information.

Open hot and cold water taps throughout the house and let the water run until you detect a chlorine odor. To ensure that the hot water heater is also purged, allow the hot water to run until the water becomes cold. Turn off the taps and allow the water to stay in the pipeline for about six hours or overnight but not more than 36 hours to avoid corrosion.

Turn the UV system on, then open hot and cold water taps throughout the house and let the water run until the chlorine odor disappears.

7) Operation and Monitoring

a) Ultraviolet Disinfection System

Your BA Series Ultraviolet Disinfection System will provide years of safe, effective and reliable disinfection with minimal maintenance. Establish and implement a routine physical monitoring and maintenance schedule. A maintenance log has been provided in back of the IOM manual.

b) Power Supply

The ballast power supply will monitor the status of the ultraviolet lamp and ballast on the display. It is strongly recommended that a surge suppressor be installed between the power cord and the outlet, or the unit to be plugged into a GFI outlet to protect the sensitive electronics in the ballast. If a lamp or ballast power supply fault occurs, refer to the procedures listed in the Troubleshooting Section.

Power Supply—120V 60Hz Input Voltage Standard Models—Models BA-4, BA-7

P/N BA-RB1



The ballast located midway on the power cord has built-in monitoring functions to indicate lamp operation. The LED will glow green when the lamp is operational and red when the lamp has failed. There is also an audible alarm that will sound when the lamp has failed.

P/N BLST0051

The power supply located midway on the power cord has built-in monitoring functions to indicate lamp operational status and is equipped with an audible alarm.

- 1) The “green” LED will glow when the lamp is operational.
- 2) The “red” LED will glow when the lamp is in a fault state. The audible alarm will sound to indicate lamp fault.



Power Supply—100-240V 50/60Hz Input Voltage Standard Models—BA-10 & BA-15

P/N BA-RB & BLST0037


The ballast located midway on the power cord has built-in monitoring functions to indicate lamp operation. The LED will glow green when the lamp is operational and red when the lamp has failed. There is also an audible alarm that will sound when the lamp has failed.



**Power Supply—110-240V 50/60Hz Input Voltage
Plus & Monitor Models—BA-4P, BA-7P, BA-10P, BA-15P, BA-10M, BA-15M**

P/N BLST0050

The power supply contains built-in monitoring functions to indicate lamp life, lamp operational status and is equipped with a run time meter and audible alarm.

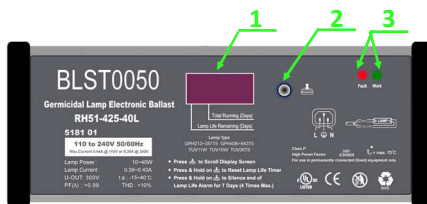

1) The **Display Screen** will scroll to show the total number of days of lamp operation and the number of days remaining in lamp life.

2) The **Operation Button** is used to scroll through the display screen, silencing the end of lamp life alarm, and for resetting lamp life timer. When power is turned on, the power supply displays the days of remaining lamp life on the display screen. To operate the display screen, press the button to scroll. Press for 1 second to switch the display to show the overall ballast working days, press again to return to the lamp life display.

3) The **“Green” LED** glows when the lamp is operational and the **“Red” LED** glows when the lamp is in a fault state. The audible alarm will sound when the lamp has reached its’ end of life or has failed.

To **Silence End of Lamp Life Alarm**, press and hold on the operation button for 5 seconds. The alarm has the ability to silence in 7 day increments with a maximum of 4 times. If the display reads “A3”, this is an indication the lamp has reached end of lamp life. If you have silenced the lamp life alarm This will happen at the end of lamp life, when the remaining lamp life goes from 1 to 0. The alarm will come on at intervals—“rSET”

After the 4 time max, you must replace your lamp*. Make sure to unplug ballast before installing a new lamp. Once a new lamp has been installed plug in the ballast and then reset the Lamp Life Timer.

To **Reset Lamp Life Timer**, press and hold on the operation button for 15 seconds. The ballast will give one short beep to confirm reset.

*Refer to UV Lamp Maintenance on lamp replacement.

**Power Supply—100-240V 50/60Hz Input Voltage
Optional for All Models**

P/N BLST0068

The power supply contains dry contact signal output ports, and is equipped with a run time meter, lamp life timer, and audible alarm. The ballast contains 3 ports: power input port, dry contact signal output port and lamp output port. The power supply is capable of being connected to a solenoid valve.

Warning! Dry Contact Control Signal may not exceed 250V, 5A current

It is strongly recommended that a surge suppressor be installed between the power cord and the outlet, or the unit to be plugged into a GFI outlet to protect the sensitive electronics in the ballast.

The Screen will display the following 3 functions:

Tap to scroll through the 3 display values.

1.

USED TIME
1003H 22M30S

 This display shows the elapsed runtime since the last reset.

2.

REMAINING TIME
5996H 37M30S

 This display shows the amount of lamp lifetime remaining.

3.

OPERATE TIME SET
7000 HOURS

 This display shows the number of hours that have been set for lamp replacement. Lamp lifetime is set by the UV manufacturer based on dosage calculations and lamp depreciation curves. Most manufacturers recommend changing lamps once every year or 8760 hours.


Lamp Runtime Reset Instructions:

Use the following instructions to reset the lamp lifetime when replacing a lamp.

1. Unplug the ballast and replace the lamp.
2. Once the lamp has been replaced and all other service items accomplished, plug the ballast into the power source. The ballast has a protection circuit that looks for a lamp and will display an error message if a lamp is not connected when the ballast is plugged back in. Power latch off is an odd way of saying unplug the ballast for a couple of minutes so it can reset.

LAMP ABSENCE!
POWER LATCH OFF



LAMP SHORTED!
POWER LATCH OFF


3. Press and hold  until you see the following display:

ENTER PASSWORD



0000

The password is **1234**

Use  to scroll up through the numbers. Use  to move to the next number.

Once the password is entered, press and hold  until the display shows:

RESET USED TIME
ARE YOU SURE? **N**


4. Use  to change N to Y
5. If you are only resetting lamp lifetime, **go to step 6**. To change lamp lifetime, go to step 7
6. Press and hold  until you receive the following confirmation:


USED TIME RESET
DONE!

Lamp runtime hours have been reset.


Lamp Lifetime Reset Instructions:

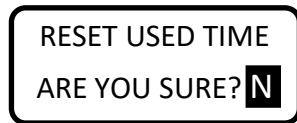

Lamp lifetime hours is factory set at 8000 hours. If you need to reset the total lifetime hours to 9000 hours (or some other figure), REPEAT STEP 3. When you get to the reset used time display:




7. Tap  to select N.

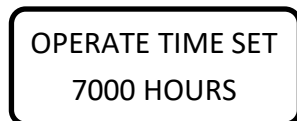8. You will see the following display:



Use  to scroll up through the numbers. The numbers will scroll in 100 hour increments. Once you have the hours set, press and hold  until you receive the following confirmation:

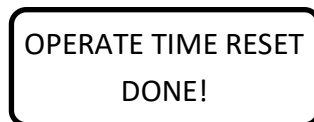

Countdown time and lamp lifetime hours have now been reset.

8) UV Monitor (Optional)




a) *General Monitor Operation*

The UV Monitor option consists of a UV sensor probe, a UV monitor board, and a UV digital display. Ultraviolet light output is measured from the UV Lamp at the top of the cylinder by the UV sensor probe. The sensor probe is connected to the UV System on the treatment chamber where the UV sensor port is located. The close proximity of the sensor probe to the UV lamp constantly monitors UV intensity output of the lamp. A signal is sent to the UV meter board for processing, and is displayed as a percentage value from 0-100% on the digital display.

When new lamps are installed, the board must be calibrated for the new lamps to 100%. As the lamp ages, the ability to generate UV diminishes. Lamp effectiveness is measured at the Beginning of life (BOL) or initial start up, and its end of effectiveness or End of Lamp Life (EOL). The UV display will reflect the lowered UV intensity.

The sensors constant monitoring of the UV intensity on a 0%-100% scale allows the system user to identify abnormalities in UV output such as lamp or quartz sleeve fouling or the normal declining levels of UV intensity over time. These thresholds are set to activate an alarm system notifying the system user of a potential problem.

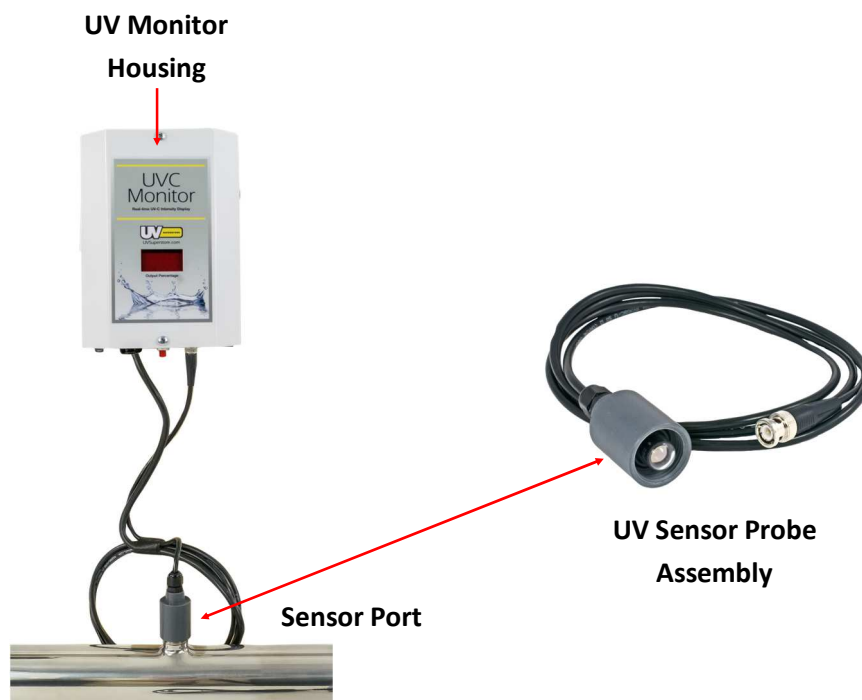

b) Monitor Installation

All installation and maintenance should be done in accordance with state and local electrical and building codes.



1) Determine a suitable location to install the UVC Monitor. Mounting location should be in close proximity to the ultraviolet treatment chamber.

It is recommended to place the monitor above the chamber and away from any water connection point(s). This will block water from potentially leaking onto the monitor by means of a leak at a connection point or a “sweating” system. To prevent any water from potentially entering the monitor, make sure you allow for a “drip-loop” on the lamp and power cord.

2) Before installing and tightening the sensor probe,

a) UV System must be depressurized and drained of water.

(Refer to Plumbing Sanitization Procedure in Installation Instructions Section)

b) Attach the sensor probe assembly to the sensor port on the UV chamber. **DO NOT** use a wrench to tighten the sensor probe. This can only be done by **hand tightening**. Ensure the sensor probe is as tight as possible by hand. Overtightening may result in breakage and damage to the sensor probe.

3) Once the sensor probe has been installed and secured to the sensor port, connect the female BNC connector from the sensor probe to the male BNC connector on the UVC Monitor.


4) Plug the power cord into the wall outlet with the appropriate required voltage.

5) The audible alarm will sound for approximately 3 minutes when the UV monitor is turned on. This time delay is designed to allow the ultraviolet lamp to heat up and reach the safe output level.

6) During periods of no flow, the UV lamp will heat up causing the UV intensity to drop below the set point. When water flow resumes, allow the system to run for at least three minutes before checking UV intensity.



PROPER EYE PROTECTION SHOULD BE WORN WHEN WORKING WITH UV LAMPS.

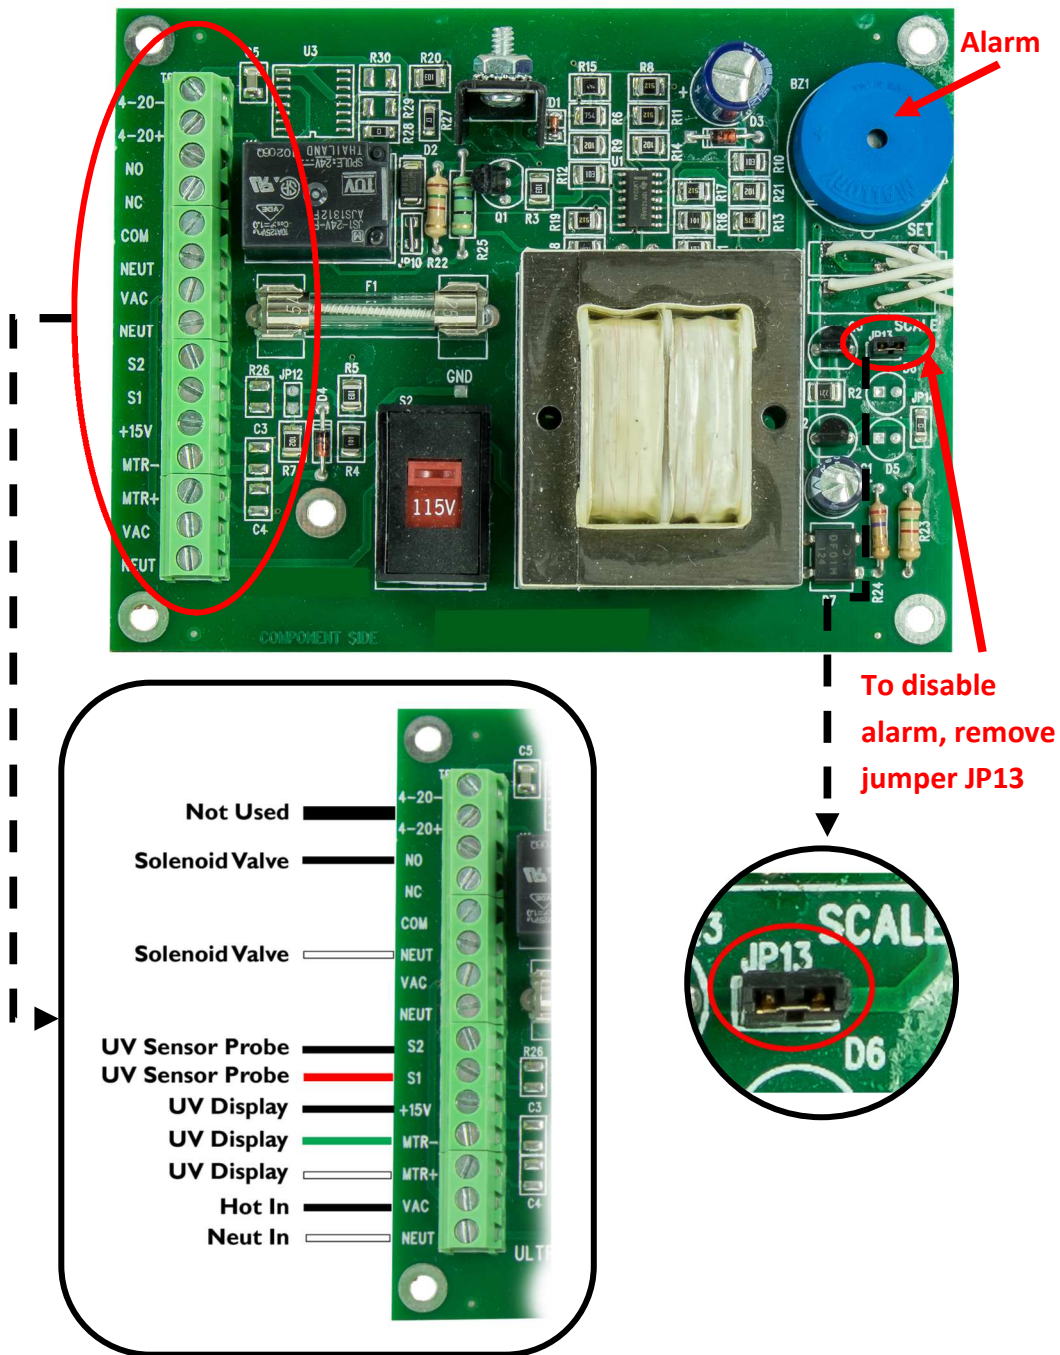

NOTE: ANY EXTERNAL ACCESSORIES CONNECTED TO UV METER BOARD IS NOT TO EXCEED 5 AMPS

c) Monitor Calibration



The ultraviolet meter can only be calibrated when the power switch is in the ON position, lamps are operational and water is flowing through the system. Allow the lamp to warm up for at least three minutes prior to any calibration while water is running through the system. During this three minute warm up, the buzzer will sound. Calibration should be complete once the lamps have been operational for 100 hours.


To set the low UV intensity alarm find the **SET** Push Button (See Figure 3)

1. Push and hold down the **SET** button (See Figure 3)
2. The low set point of the meter should be set at 85%. If adjustment is needed, turn the set point until the digital display reads 85% according to the manufacturers recommendations.
Adjust the set point by turning the potentiometer. (See Figure 4)


Turn **SET** Adjustment to right (clockwise) to raise the **SET POINT**
Turn to **Left** (counterclockwise) to lower the **SET POINT**
Release **SET** Push Button to run position.

3. To test for Low UV intensity turn the scale Potentiometer adjusting 0-100% meter scale down below the % set point level.

4. Adjust **Scale / Run** display to 100% (See Figure 4)

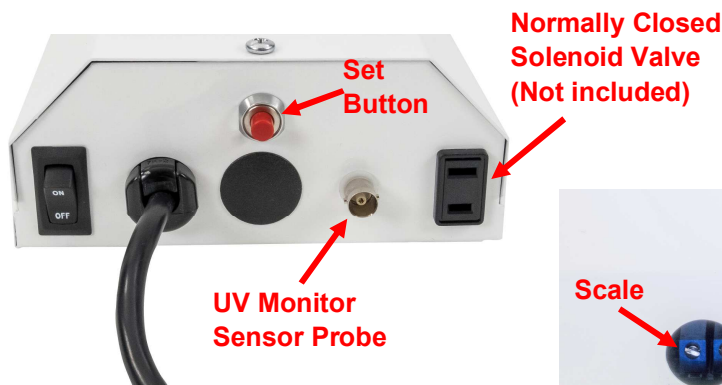

(Figure 3)

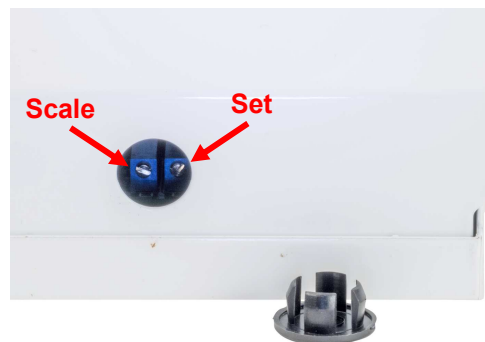

(Figure 4)

d) Wiring for 230V



The meter board of the UVC Monitor is capable of operating on 115V or 230V. The unit has been supplied with a 115V power cord.



To run at 230V:

- 1) Locate the internal voltage adjustment switch on the monitor board
- 2) Switch to the desired position of 230V

Wiring Diagram

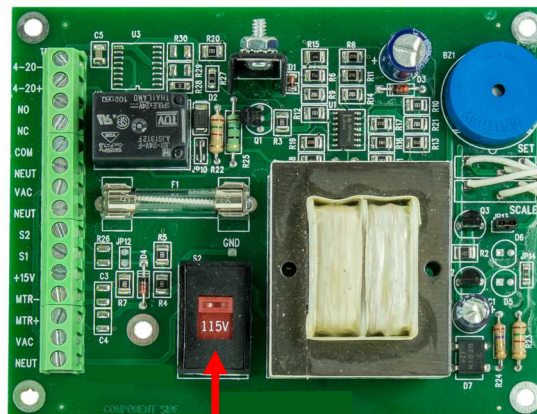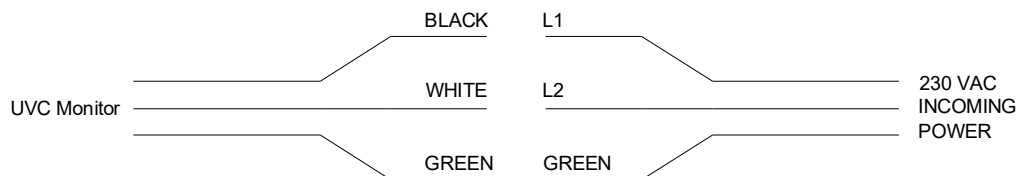

**Voltage
Adjustment
Switch**

9) Maintenance

Always disconnect power before servicing the system. It is recommended that all installation and maintenance should be done in accordance with state and local electrical and building codes.

a) **UV Lamp Maintenance**



Your BA Series ultraviolet disinfection system will give many years of safe, reliable and effective disinfection with minimal routine maintenance.

Replace your UV lamp on an annual basis

UV lamps lose intensity over the 10,000 hours rated life, roughly one year of continuous use. Your UV lamp will still be glowing after the years worth of use, but the glow that you can see is not in the UV spectrum that provides the microorganism reduction the system is designed for. Ultraviolet light is not visible to the naked eye, and the system has been sized to provide enough UV intensity to disinfect for up to the 10,000 hours of use. Using lamps longer than this can cause your system to not provide UV intensity high enough for the proper dosage required for disinfection. Knowing that the UV intensity will fall from the original levels at the end of one year, your UV system is designed to provide the rated dosage **at the end of lamp life to provide safe and effective disinfection.**

When a new lamp is installed, it is providing dosage higher than rated at, falling down to rated dosage at the end of one year. This is the reason it is highly recommended for you or your water professional to keep accurate records of when lamps are replaced and replace them annually. For your convenience, a maintenance log has been provided in the back of the IOM Manual.



The UV lamp is very fragile. Do not handle it with bare hands. Use **clean cotton gloves or cloth** when handling lamp to keep it free of dust or fingerprints. If dust or fingerprints get on the lamp, wipe it with a clean cloth and denatured alcohol.

Take care when removing the ultraviolet lamp from the packing carton. Disconnect the old lamp from the lamp socket and remove old lamp. If the unit requires quartz sleeve maintenance, refer to the quartz sleeve maintenance procedures for complete instructions.

Slowly and carefully slide the new lamp into the quartz sleeve. Attach the ultraviolet lamp socket to the lamp base. Ensure the lamp socket is pushed all the way down to the base of the lamp for proper contact. Then screw the strain relief into the threads of the compression nut.

b) Quartz Sleeve Maintenance

Cleaning Procedures & Replacement

Significant film or debris deposits formed on the quartz sleeves will impair the ability of the ultraviolet rays to penetrate through the quartz and into the water. To a great extent, your frequency of cleaning will depend upon the water quality. The more minerals present in the water, the more frequently the quartz will require cleaning. A periodic visual inspection of the quartz will be necessary to determine the frequency of cleaning. Initial inspection should take place after thirty (30) days of operation. If the quartz is dirty, shorten the cleaning intervals. If the quartz is clean, lengthen the cleaning intervals.

To clean quartz sleeves, depressurize the unit by first turning off the inlet valve. Open a tap to relieve pressure and then turn off the outlet valve. Turn off the power to the ultraviolet system. Drain the vessel. Next, unscrew the strain relief securing the lamp connector from the compression nut. Then, slide the lamp out about 2" from the compression nut and remove the lamp connector from the lamp and then carefully remove the lamp. Unscrew the compression nuts from the nipples. Remove the O-rings and slide the quartz sleeve out of the unit, taking care to not let the quartz bump against any metal parts. The quartz sleeve may be cleaned with warm soapy water and rinsed thoroughly. If this is not sufficient, denatured alcohol may be used. Assembly is the reverse of removal.



Lamp and quartz sleeve are fragile

It is recommended to sanitize the entire system after servicing
(Refer to instructions on sanitizing the plumbing system)

c) Lamp Recycling

UV lamps need to be recycled like fluorescent lamps because they contain mercury.




Please follow your local recycling laws. For assistance finding a recycling center in your area, visit www.lamprecycle.org. Please contact your manufacturer's representative in the event that you are unable to find a disposal location.

d) Countdown Timer (Model Dependent Option for Standard Systems)

A countdown timer is used as a reminder to replace the UV lamp in your system after 365 days (one year). When time has lapsed, the timer will sound. After routine maintenance and UV lamp replacement, press the reset button located on the front cover using the tip of a paper clip or something similar to start the next 365 days. To replace the battery, pull apart the top cover from the bottom of the timer. Replace with a LR44 or similar type battery. Snap the cover back on to the bottom and reset.

BA Series Parts Breakdown

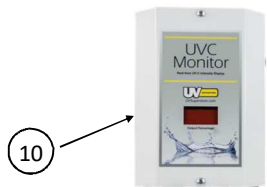

Replacement Parts List

Standard Models: BA-4, BA-7, BA-10, BA-15

Plus Models: BA-4P, BA-7P, BA-10P, BA-15P

UV Monitor Models: BA-10M, BA-15M

Item #	Description	BA-4 BA-4P	BA-7 BA-7P	BA-10 BA-10P BA-10M	BA-15 BA-15P BA-15M
1	Power Supply (Standard Models)	BA-RB1/ BLST0051	BA-RB/ BLST0051	BA-RB/ BLST0051	BA-RB/ BLST0051
	Power Supply (Plus & Monitor Models)	BLST0050	BLST0050	BLST0050	BLST0050
	Power Supply—(Dry Relay Contact)	X	BLST0068	BLST0068	BLST0068
	Power Supply—(Waterproof)	X	BLST0037	BLST0037	BLST0037
2	Compression Nut*	CN0042			
3	O-Ring EPDM	ORNG0009			
4	Lamp	GL330/4	GL463/4	GL650/4	GPH843T5L/4C
5	Quartz Sleeve	G10-3150	BA-Q7	BA-Q10	BA-Q15
6	Chamber Clip—Aluminum	BRKT0012			
7	Viewport	BA-VP			
Not Shown	Ballast Clip	BA-BC (for BA-RB1)	BA-BC (for BA-RB)	BA-BC (for BA-RB)	BA-BC (for BA-RB)
8	Timer Holder*	BA-TH			
9	Count Down Timer**	CDT-365			
10	UV Monitor**			BA-MON	
11	Sensor Assembly *** (Requires UV Monitor Model)			4-0008	

*Compression nut photos vary depending on manufacturing date

**Optional for Standard Models BA-4 & BA-7

***UV Monitor Models


Technical Specifications

Table 2

Dosage vs Flow Rate – BA Series	BA-4 BA-4P	BA-7 BA-7P	BA-10 BA-10P BA-10M	BA-15 BA-15P BA-15M
Flow rate for UV dosage of 40 mJ/cm ² at end of lamp life (10,000 hours-1 year)*	2 GPM	3.5 GPM	5 GPM	8 GPM
Flow rate for UV dosage of 30 mJ/cm ² at end of lamp life (10,000 hours-1 year)*	2.5 GPM	5 GPM	8 GPM	11 GPM
Flow rate for UV dosage of 16 mJ/cm ² at end of lamp life (10,000 hours-1 year)*	4 GPM	7 GPM	12 GPM	16 GPM
*Flow rate based on 95% UVT for clear fresh water				

Figure 5

Overall System Dimensions

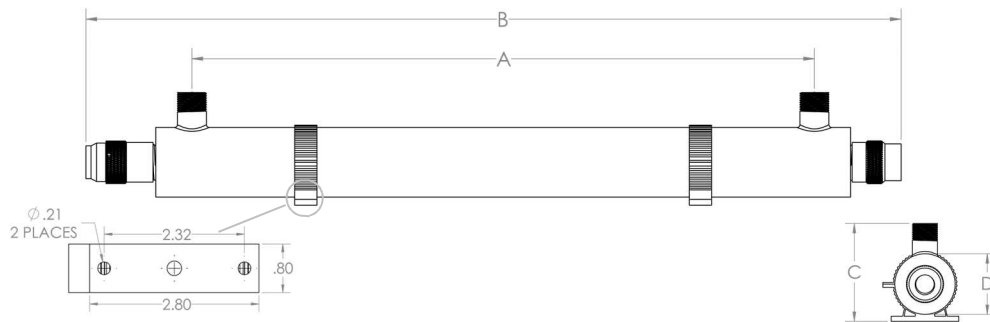

Model	A	B	C	D	Inlet/ Outlet	Operating Voltage*
BA-4, BA-4P	10.23"	16.4"	4"	2.5"	1/2" MPT	120V 60Hz
BA-7, BA-7P	17.32"	23.25"	4"	2.5"	3/4" MPT	100-240V 50/60Hz
BA-10, BA-10P, BA-10M	23"	29"	4"	2.5"	3/4" MPT	100-240V 50/60Hz
BA-15, BA-15P, BA-15M	31.5"	38.05"	4"	2.5"	1" MPT	100-240V 50/60Hz
Dimensions may vary slightly depending on Inlet/Outlet connection size *Refer to Operation and Monitoring for the specific operating voltage requirements of your UV System						



Be sure to leave unobstructed clearance on one end of the UV unit for removal of lamp and quartz sleeve. Recommended clearance is length of unit (Dimension B) plus 4 inches.

Troubleshooting

Situation	Recommended Action
Unit is leaking	<ul style="list-style-type: none"> • Check to see that the compression nut is tight. • Verify that inlet pressure does not exceed 100 PSI. • Verify O-Ring is seated properly, follow manual instructions. • Lubricate O-Ring with food grade silicone. • Check O-Ring for cracks or tears. Replace if necessary. • Check quartz sleeve for possible cracks or chips. Replace if sleeve is cracked or chipped.
Poor bacterial performance	<ul style="list-style-type: none"> • Replace lamp if it is more than 365 days old or nearing the end of its lamp life. • Inspect quartz sleeve(s) and make sure it is clean. • Perform routine maintenance. • Check water quality. If water quality has changed, take corrective action. Water supply cannot exceed maximum concentration levels as shown in Table 1 in Pre-Installation Instructions. • Verify flow rate vs disinfection levels as shown in Table 2 in Technical Specifications.
Lamp status LED is red	<ul style="list-style-type: none"> • Lamp has failed. Replace lamp.
Lamp status LED is not glowing	<ul style="list-style-type: none"> • Check for power at outlet. If power is present, replace ballast.
Audible Alarm Sounds	<ul style="list-style-type: none"> • Lamp has failed. Replace Lamp.
Power Fails	<ul style="list-style-type: none"> • Unit will restart automatically when power is restored. • The unit is designed for continuous operation. Never connect the unit to a timer or other device, which will cause the unit to cycle on and off. Excessive cycling will reduce lamp life.
Low UV Monitor Reading (Less than 85% transmission) (Models BA-10M & BA-15M)	<ul style="list-style-type: none"> • Check water quality. Ensure that color, turbidity, and iron content are within normal parameters. • Ensure input voltage matches requirements. • Verify lamp is on and less than 1 year old. • Replace old or defective lamp(s). • Clean quartz sleeve(s). • Clean UV sensor lens. • If reading is at 0%, ensure UV sensor cable is connected.

If questions still remain after completing a troubleshooting procedure, please contact the manufacturer.

Maintenance Log

You must perform routine maintenance in order to achieve optimum performance levels from your BA Series water treatment system. As you perform routine maintenance or necessary service on your system, record the dates in the maintenance log. The maintenance section of the IOM Manual provides instructions for servicing and maintenance procedures.

Lamp Replacement (every 365 days)	Quartz Sleeve Cleaning (as needed)	Quartz Sleeve Replacement (every 3 years)	O-Rings Replacement (with sleeve change)

Model Number

Serial Number

Limited Warranty

UV Superstore's BA Series Residential Water Treatment systems are provided with a limited warranty. These units carry a warranty to be free from defects in materials and workmanship for one year from the date of purchase under the conditions of normal usage and service for the complete system. Additionally, these units carry a four year warranty for the treatment chamber. If the product fails or malfunctions during the warranty period, UV Superstore shall inspect the inoperative product and have the option to repair or replace any components, which, in the assessment of UV Superstore were originally defective or became so under normal conditions of use and service. Customers must first call UV Superstore and be issued a Return Authorization number before returning any product or component. The equipment or component must be returned to UV Superstore freight prepaid and insured to the address below.

Warranty Statement

UV Superstore warrants replacement lamps, purchased for routine maintenance, to be free from defects in material and workmanship for a period one year from the date of purchase. During this time, UV Superstore will repair or replace, at its option, a defective lamp free of charge except for shipping and handling charges and any prorated charges (where applicable).

The warranty period on replacement lamps will be verified using date codes and/or purchase receipts. UV Superstore will advise whether the defective item needs to be returned for failure analysis.

None of the above warranties cover damage caused by improper use or maintenance, accidents, acts of God or minor scratches or imperfections that do not materially impair the operation of the lamp. The warranties also do not cover products that are not installed as outlined in the applicable IOM Manual.

The limited warranties described above are the only warranties applicable to the lamps outlined. These limited warranties outline the exclusive remedy for all claims based on a failure of or defect in any of these lamps, whether the claim is based on contract, tort (including negligence), strict liability or otherwise. These warranties are in lieu of all other warranties whether written, oral, implied or statutory. Without limitation, no warranty of merchantability or of fitness for a particular purpose shall apply to any of these lamps.

UV Superstore, Inc. does not assume any liability for personal injury or property damage caused by the use or misuse of any of the above products. UV Superstore, Inc. shall not in any event be liable for special, incidental, indirect or consequential damages. UV Superstore liability shall, in all instances, be limited to repair or replacement of the defective product or part and this liability will terminate upon expiration of the applicable warranty period.

For all warranty claims you must contact UV Superstore at the below address. All claims must be filed within 30 days.




820 Tucker Court, Winder, GA 30680

Phone: 770-307-3882

Fax: 770-307-3872


sales@uvsuperstore.com

www.uvsuperstore.com

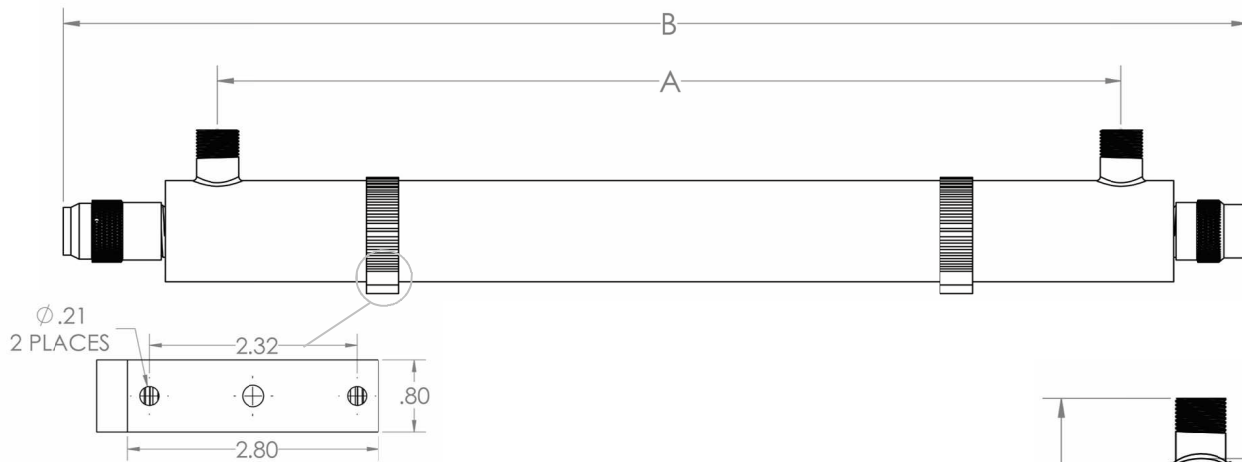

Model	A	B	C*	D	Inlet/Outlet
BA-4, BA-4P	10.23	16.4	4	2.5	1/2" MPT
BA-7, BA-7P	17.32	23.25	4	2.5	3/4" MPT
BA-10-, BA-10P, BA-10M	23	29	4	2.5	3/4" MPT
BA-15, BA-15P, BA-15M	31.5	38.05	4	2.5	1" MPT

*Dimensions shown are in inches and may vary slightly depending on Inlet/Outlet connection size



UV Superstore, Inc.
820 Tucker Ct.
Winder, GA 30680
P: 770.307.3882 F: 770.307.3872
www.uvsuperstore.com

TITLE: BA VESSEL

MATERIAL: 304 STAINLESS STEEL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF UVSUPERSTORE, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF UVSUPERSTORE, INC. IS PROHIBITED.

DWG. NO. MV-BA	REV A
-------------------	----------

3/10/16	BY: RWD	SHEET 1 OF 1
---------	---------	--------------



820 Tucker Court, Winder, GA 30680

Phone: 770-307-3882

Fax: 770-307-3872

sales@uvsuperstore.com

www.uvsuperstore.com